


ASSAY PERFORMANCE SUMMARY

Moxifloxacin

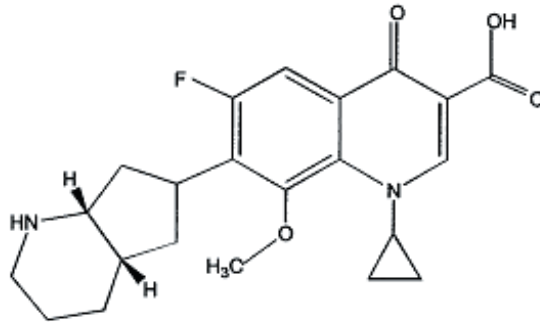

Method	LC/MS/MS
Matrix	human plasma
Anti-coagulant	sodium heparin
LLOQ	10.0 ng/mL
ULQ	1,000 ng/mL
Sample Volume	100 μ L
Accuracy: %Bias	
LLOQ	-2.2
LQC	-9.7
MQC	2.8
HQC	3.9
DilQC (DF=10)	-5.5
Precision: %CV	
LLOQ	10.6
LQC	8.0
MQC	4.8
HQC	3.0
DilQC (DF=10)	8.4
Stability:	
Ambient	7 hours
No. Freeze/thaws	3